

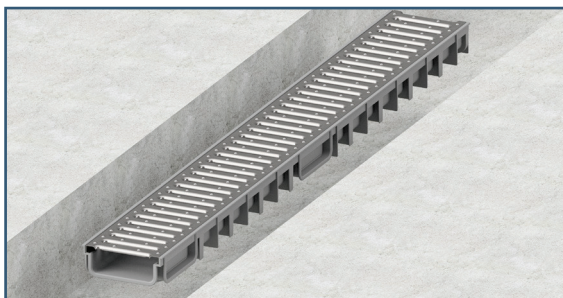


4ALL H50, Installation

How to install the drainage channel correctly

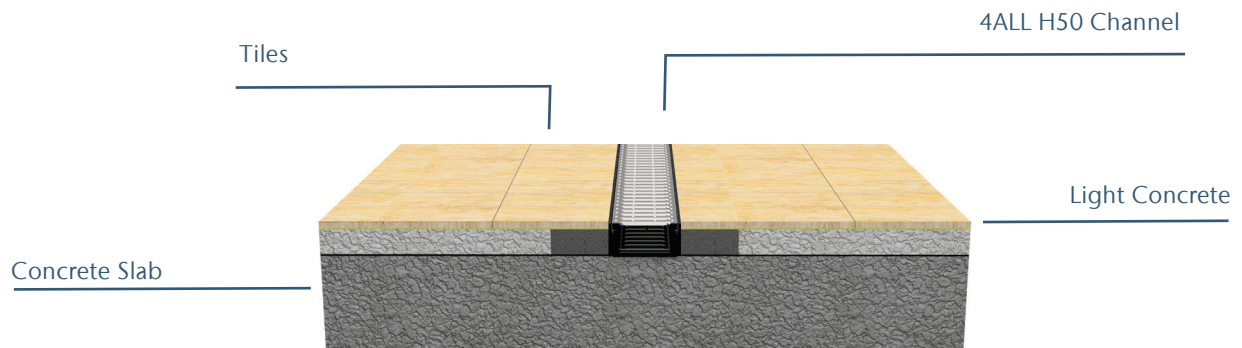

1. Place the channel with the installed grating inside the trench.
It is suitable to protect the grating with a PVC film during the installation, to avoid any concrete residues.

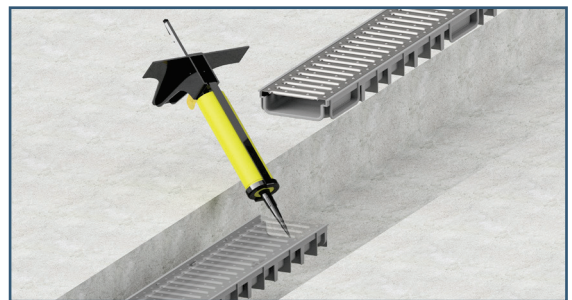

2. Apply the sealant on the of the connection area (male/female) and installed the channels.
Verify that the drainage line respect all the relatives quotes.




3. Create your drainage line and put the end caps.
If necessary open the side connections and use pipes.



4. Finally put the concrete in order to completely fill and close all the space left free between the channels and the trench.

...Easy installation for a perfect result

Example: Installation on concrete slab with horizontal outlet

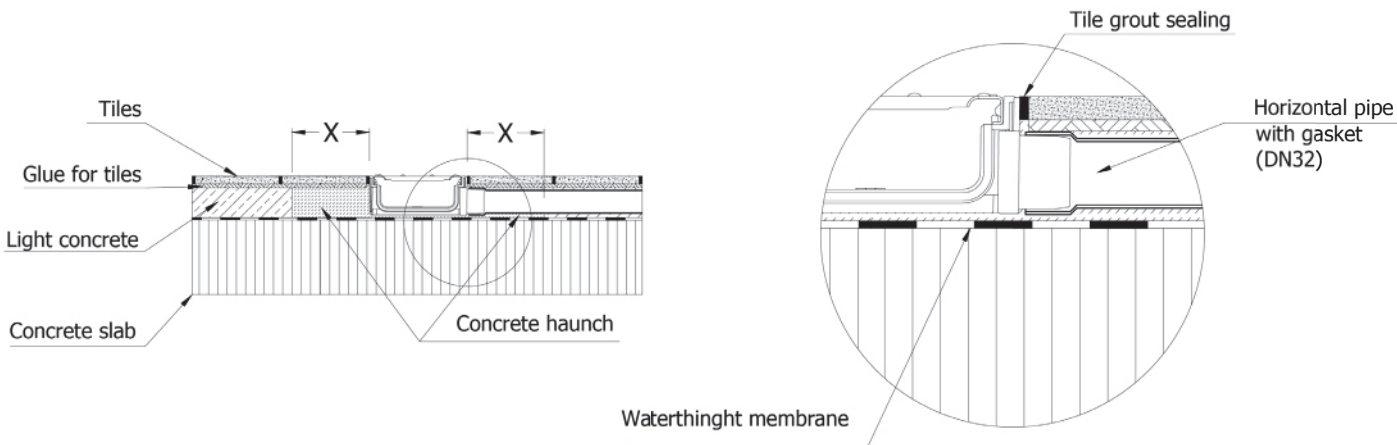

Load Class	(ref. EN 1433)	A 15	B 125	C 250	D 400	E 600	F 900
Quality for Bedding & Haunch Concrete (Min)	(ref. EN 206-1)	C20/25	On request				
Quality for Bedding & Haunch Concrete (Min) in area with frost cycle		C30/37 XF40	On request				
Bedding Dimensions (Min)	X (Cm)	10	On request				
	Y (Cm)	Height of the channel					
	Z (Cm)	10	On request				